


Monteringsanvisning / Installation instruction


FMM: 101 12 67 - Rev.000 - 2025.09.09

Duschstång


Shower rail

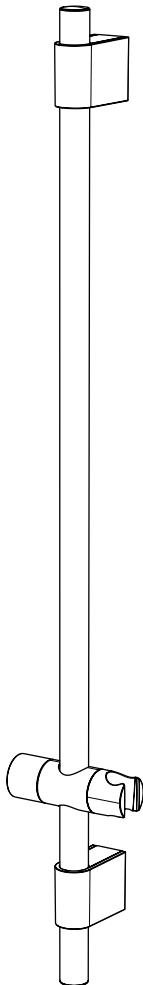


1 | A ————— Trä / Wood

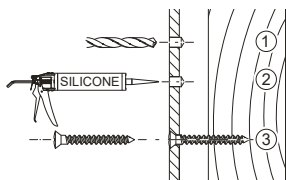

1 | B ————— Betong / Concrete

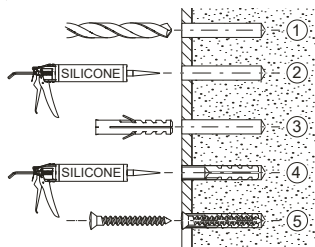

2

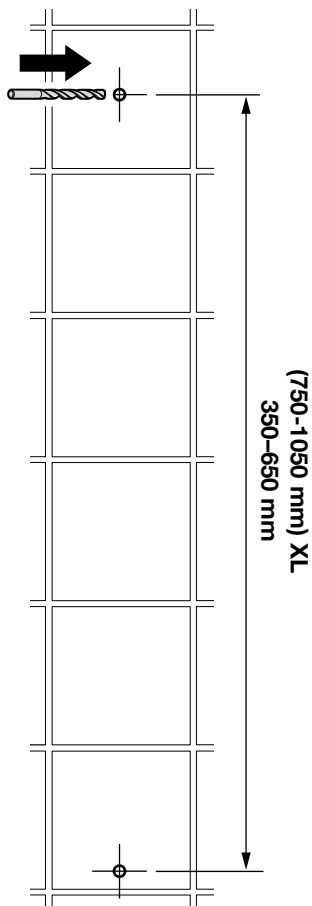

3

